


Installation should be carried out by a qualified installer and in compliance with Water Regulations, for further details please contact your local water authority.

Always turn off or isolate the water supply, before commencing the work.

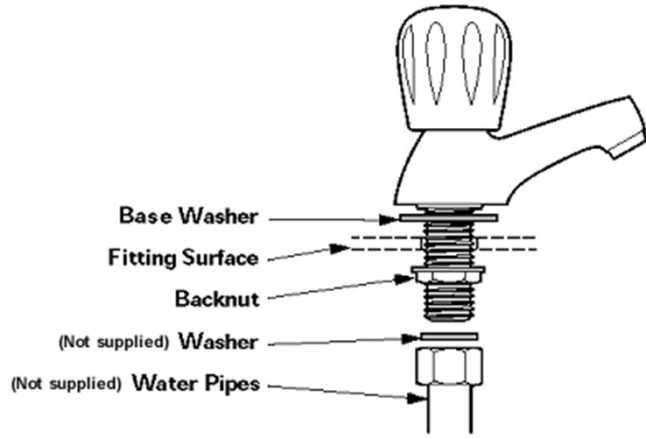

Installation details

Before commencing installation of the new product, ensure that the system has been flushed to remove any debris, which can damage the seating washer of the valve.

Place the base washer over the tail.

Place the tail through the hole in the unit and position, so as to direct flow correctly.

From the underside, screw on the backnut and tighten to underside of unit.

Do not overtighten as this may damage the nut and/or the unit.

Before fully tightening, ensure the tap is still positioned correctly.

Once secured connect the supply pipe and tighten to create a good seal.

Turn on supply and check for leaks.

Water Saving

If you require a flow regulator to be fitted to your product and the item you have purchased does not have this fitted, you will need to follow these instructions. The flow regulators come in two forms, either an in-tail regulator or antispash regulator.

NOTE: Regulators not to be used on bath taps

The antispash must be M24 thread

The fitting of the in tail regulator

must be done prior to tap installation.

The regulator should be pushed inside the tap tail, with the black rubber ring facing downwards.



Remove the existing antispash using a spanner, then fit the new version

ensuring to fit the rubber seal.

Fully tighten to create seal.



Basin, Bath and Sink Tap
Installation and
Maintenance Guide



Please retain this document for future reference.

This product should be fitted in compliance with Water Regulations, by a qualified plumber.

Use only a clean damp cloth to maintain the surface finish, use of abrasive cleaning materials will invalidate your guarantee.

Customer Care Line
0800 1951602

Website
www.deva.org.uk

English Street
Lancashire
WN73EH